Part No. PAFMGULRxxx

Mount Master Utility Block

Installation Instructions U.L. Listed

– To be installed prior to siding
-Maximum 20 lb. light fixture

Step 1

Remove the trim ring from the Block Assembly. See Figure 1A.

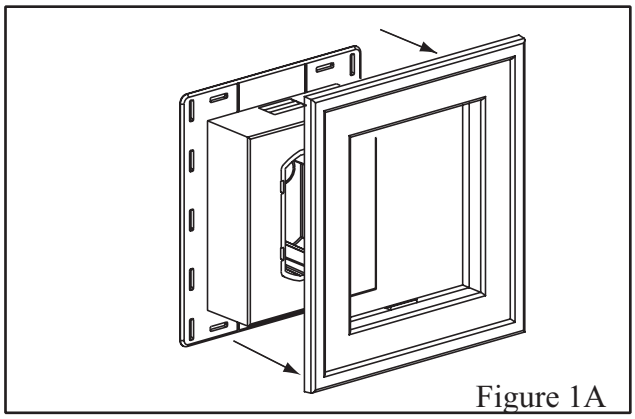

Figure 1A

Step 2

Determine where wires will come through wall and remove the corresponding knockout in the black electrical box. Score the perimeter of the round knock-outs from the inside of the box with a utility knife. Knock out from the back of the box using a screw driver as a chisel. Align the hole with the wires.

Step 3

Place the Block over the desired application. Be sure to place tape or sealant between the Block and the house. Attach the Block using an 8d nail or equivalent with a minimum of ten attachments (eight attachments around the outside of the part and two attachments on the inside of the electrical box). See Figure 2 below for proper fastener locations.

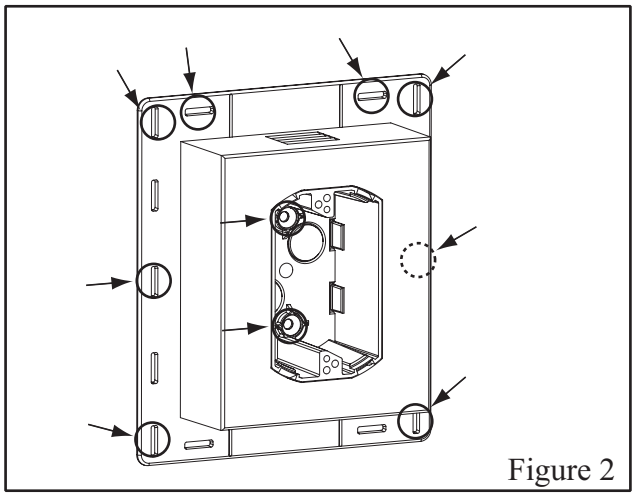

Figure 2

Step 4

Cut the siding around the Block. Install the siding according to the manufacturer's installation instructions. See Figure 3 below.

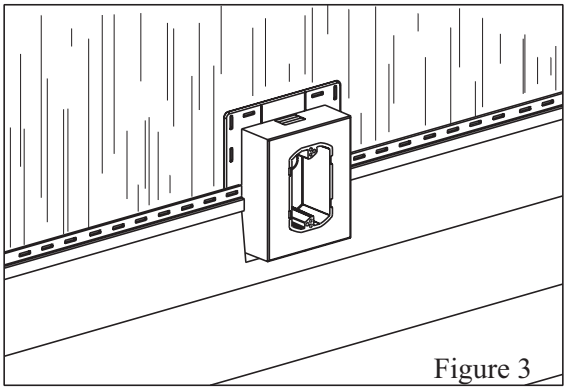

Figure 3

Step 5

Install the trim ring by locking it into place. See Figures 4A and 4B.

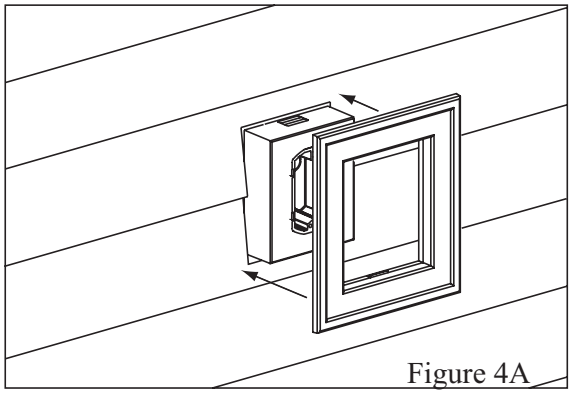

Figure 4A

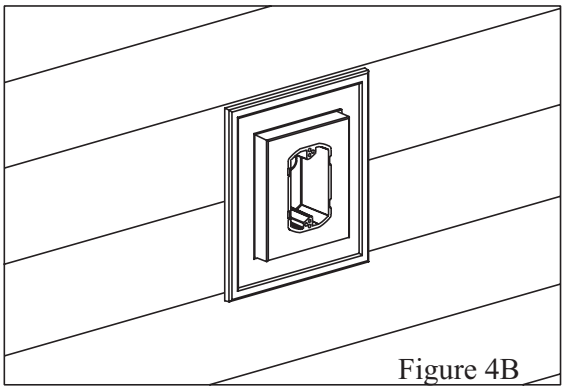

Figure 4B

Step 6

Mount the fixture to the Mount Master Utility Block. Be sure that all electrical product gaskets have the proper sealant.

I-0035
PAPC8869
01-03-06